



Place the Riser where it is most comfortable for you with the bolt fully open with tape under the slots. Leave room if you would like to remove bolt without lowering the riser if that is possible.

Use a Transfer Punch Set found a Harbor Freight to make dents for your drill marks


Depending on your stock, make a mark at the top of each slot as I could have done on this Boyd's Pro Varmint Stock. If your stock is narrower at the top of the comb use another transfer punch to space your marks evenly lower on the front slot only.



Use a 7/32" bit & a 1/4" bit.



Use the 7/32" bit first & drill half way through on all 4 dented marks, then all the way through

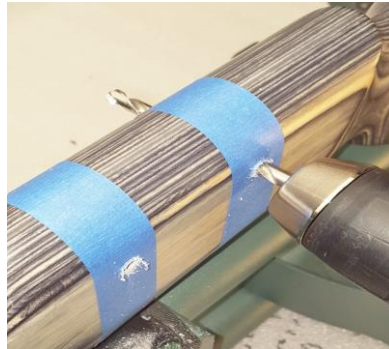

Finish up with the 1/4" bit & drill all the way through



Remove the tape



Place the Cheek Rest/Riser over the stock & place the bolts through the slots.



Place a knob on the side of the bolt & use a black sharpie to make a mark where the arrow is on the knob & Cut to length with a Dremel or Hacksaw. Round the bolts for proper fit



Re-install the bolts & raise the riser to approximate location & Press firmly on the bolt head while tightening the knob.



Installation is Complete.

Now take some time & fine tune your cheek rest/riser to the perfect height & tighten the knobs fully.

Enjoy Better Accuracy~!

Installation Instructions

For Matthew's Fabrication, LLC

Cheek Rest/Riser